


# **INGERSOLL-RAND IR-93**

## **DIGGER (BREAKER)**

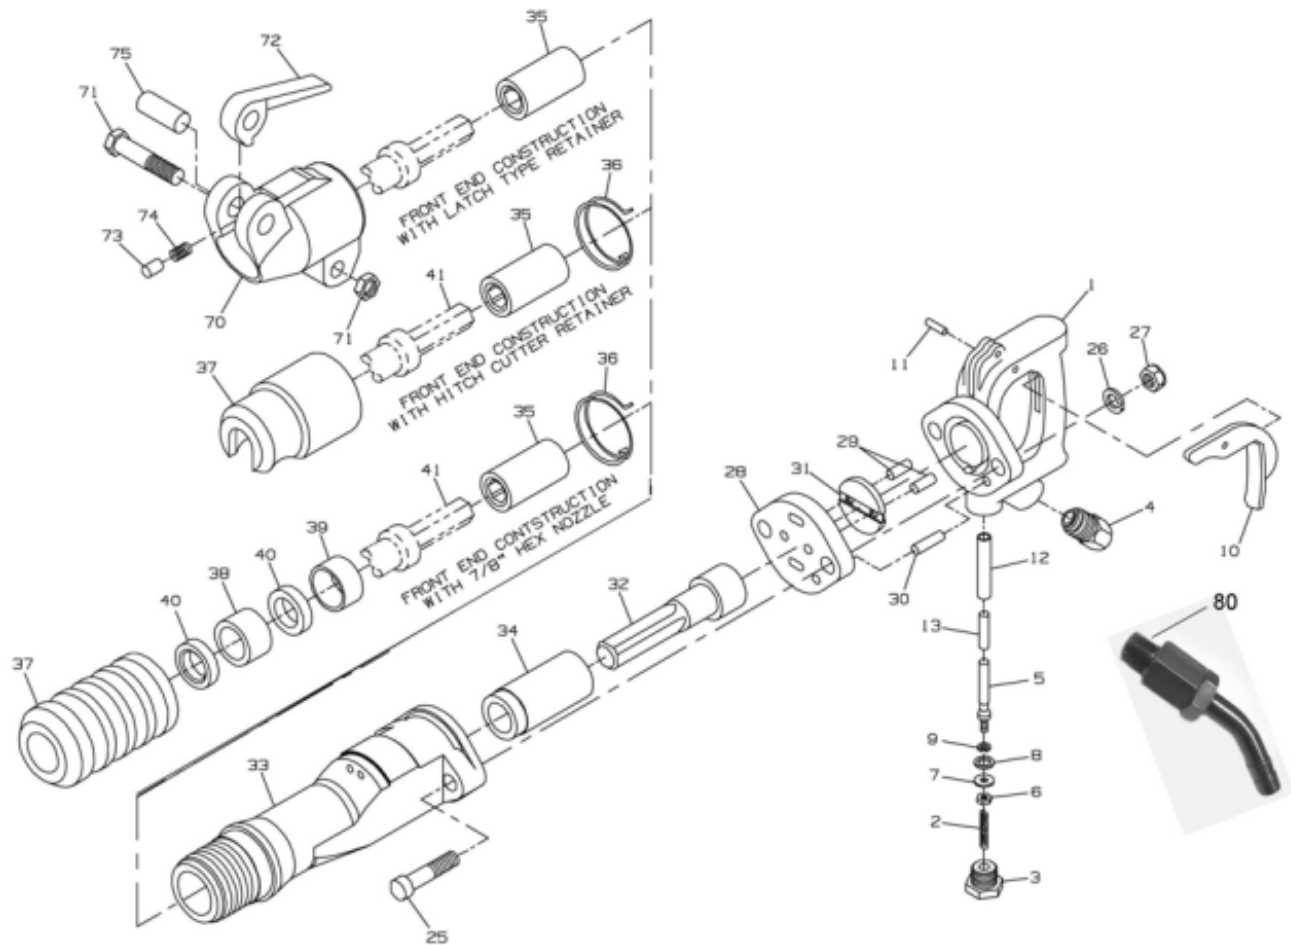

PART LIST BELOW



Index No	Part No	Description
1	7500-92	HANDLE - INSIDE TRIGGER
2	H80-11	TV-SPRING
3	7500-109	CAP-T. VALVE
4	H80-82A	SCREEN BUSHING (oem style)
5	8000-50	THROTTLE VALVE
6	73H-158	NUT-TV CAP FACE
7	8000-157	FACE CAP-TV
8	8000-159A	FACE (TV seal)
9	H54U-352	WASHER
10	97MP-18	LEVER, THROTTLE
11	13SR-265	PIN (throttle valve)
12	7500-65	BUSHING (brass / TV push pin)
13	7500-64	PLUNGER-VALVE
25	A-9	HANDLE BOLT
26	H80-67	LOCK WASHER
27	H3R-8	NUT
28	75H-41	VALVE BOX
29	73H-45	VALVE DOWEL
30	73H-21	PIN

	31	33SR-40	VALVE (730H-40)
	32	93H-200	PISTON
	33A	95H-AH100	CYLINDER W/ 7/8in BUSHING
	33B	95H-AH100-1	BARREL ASM 1in
	34	73H-101	BUSHING, BARREL
	35A	73H-86	BUSHING (chuck 7/8in hex)
	35C	73H-84	BUSHING-SQUARE
	36	97MP-48A	SPRING (lock sleeve)
	37	93H-22	STD RETAINING SLEEVE
	38	93H-50	BUFFER (rubber bumper)
	39	93H-31	BUFFER SPACER
	40	93H-331	BUFFER WASHER SET (2 halves)
	70	95L-240	FRONTHEAD-BARE 7/8
	71	21-342	BOLT (fronthead pinch)
	71A	D02-904	NUT (pinch bolt / nylock)
	72	95L-341	LATCH, (retainer)
	73	73L-245	PLUNGER
	74	95L-246	SPRING (retainer plunger)
	75	95L-342	PIN (retainer latch)
	80	HH1-A165	SWIVEL (3/8in mpt x 1/2in barb)