


Connectors and accessories for coaxial cables

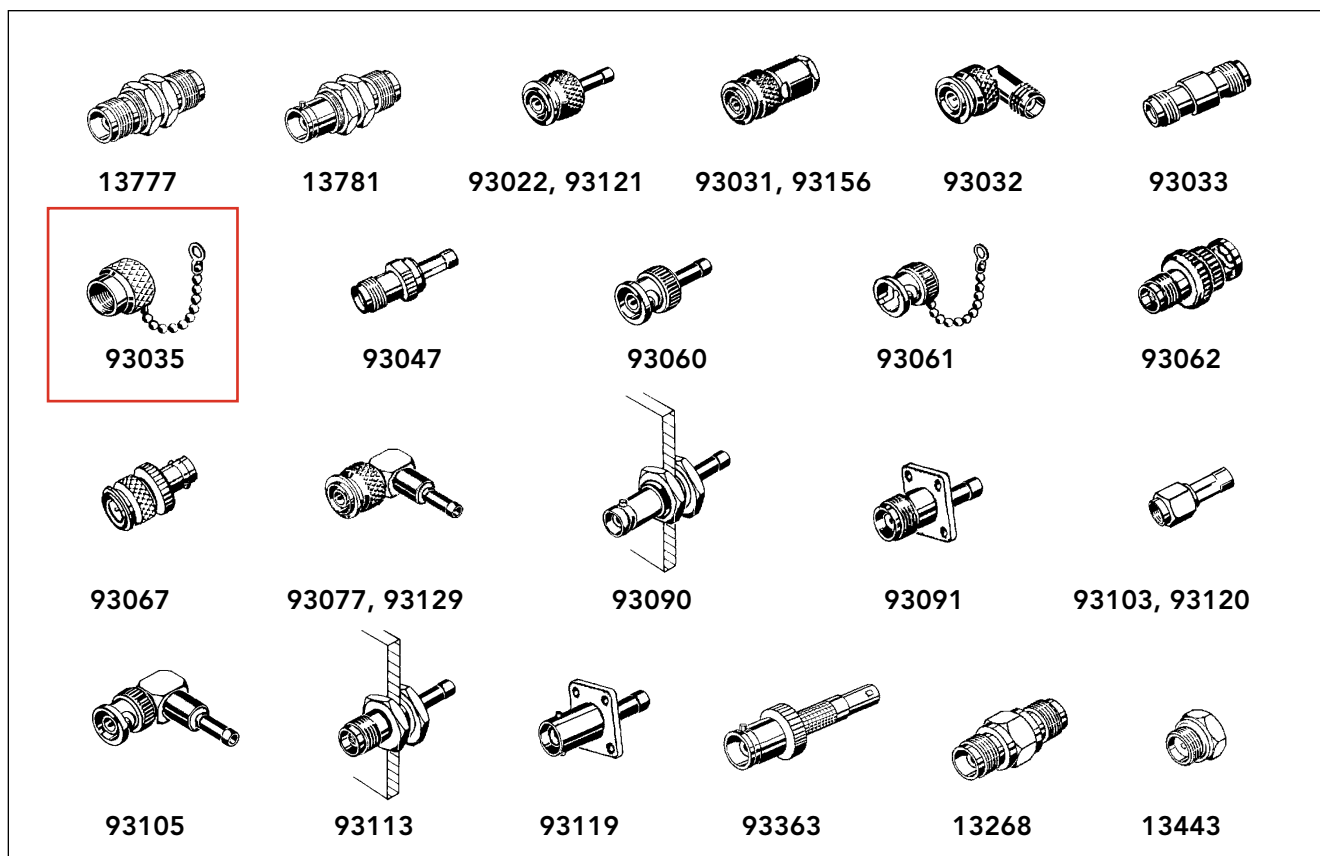

The listed equipment is used for SPM coaxial cable installations for shock pulse and vibration monitoring. See SPM installation instructions and application descriptions for details.

TNC connections

- 13777 TNC-TNC terminal connector
- 13781 TNC-BNC terminal connector
- 93022 TNC cable connector, plug, crimp
- 93031 TNC cable connector, plug, screw-type
- 93032 TNC angle adapter, plug-jack
- 93033 TNC adapter, jack-jack
- 93035 TNC dust cap for jack**
- 93047 TNC cable connector, jack, crimp
- 93067 TNC-BNC adapter, plug-jack
- 93077 TNC angle connector, crimp
- 93091 TNC terminal connector, flange, crimp
- 93113 TNC terminal connector, crimp
- 93121 TNC cable connector, crimp, for cable 90146
- 93129 TNC angle connector, solder/crimp, for cable 90146
- 93149 Contact pin, TNC/BNC for cable 90176
- 93156 TNC cable connector, screw-type with strain relief, solder/screw type

Sealed TNC connections

- 13008 TNC cable plug, crimp (see TD-009)
- 15163 TNC cable plug, crimp (see TD-262)
- 15291 TNC cable plug, composite, crimp (see TD-257)
- 13268 TNC adapter, jack-jack, for sealed connection
- 13443 Sealing plug for TNC connector 13008

BNC connections

- 93060 BNC cable connector, plug crimp
- 93061 BNC dust cap
- 93062 BNC-TNC adapter, plug-jack
- 93090 BNC terminal connector, crimp
- 93105 BNC angle connector, crimp
- 93119 BNC terminal connector, flange, crimp
- 93363 BNC-LEMO adapter (fits Bearing Checker)

SMA connections

- 93103 SMA cable connector, plug, crimp (fits TRV-01)
- 93120 SMA cable connector, crimp, for cable 90146

SMB connections

- 93286 SMB cable connector, crimp

Sealed SMB connections

- 14990 SMB cable plug, crimp (see TD-248)
- 15164 SMB cable plug, crimp (see TD-261)
- 15388 SMB cable plug, composite, crimp (see TD-258)

